


# Installation Instructions

## Contec.fix

10/08/2026

### A: Installation of Contec.fix Bottom Part

- Fix bottom part on substructure with suitable fastener (recommended fasteners see datasheet Contec.fix).
- Use screws with a sealing elements, such as SFS Isofast (wooden/ trapezoidal steel screws).
- IMPORTANT: Tighten the screw firmly until the bottom part lays flat on the insulation and is tightened properly. The bottom part must **not** bulge!
- Do not mount Contec.fix in the area of a welding seam, consider the arrangement of welding seams on CAD drawing.

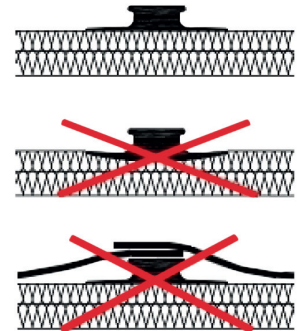

### B: Laying the Contec.proof Membrane

Laying out and align the prefabricated Contec.proof membrane.

### C: Installation of Contec.fix Top Parts

1. Remove two-piece tops directly from the shipping bag and spray underside with assembly spray.
2. Place the top parts on the magazine cart onto the centring rings.
3. With the setting tool pick a top part from the magazine cart (tip slightly from above).
4. Centre setting tool carefully above the bottom part.
5. By means of pressure and body weight on top of the setting tool, press the upper part until it clicks.

IMPORTANT: Never press setting tool jerkily downward! Never put a top part on a seam! Otherwise the roofing membrane can be damaged. If a top part does not click, replace it by a new one.

